





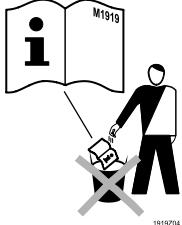



- de** Montageanleitung
- en** Mounting instructions
- fr** Instructions de montage
- sv** Monteringsinstruktion
- nl** Montage-aanwijzing
- it** Istruzioni di montaggio
- fi** Asennusohje
- es** Instrucciones de montaje
- da** Monteringsvejledning

- Differenzdruckfühler**
- Differential Pressure Sensors**
- Sonde de pression différentielle**
- Differenstryckgivare**
- Drukverschilopnemer**
- Sonda di pressione differenziale**
- Paine-eroanturit**
- Sondas de diferencia de presión**
- Trykdifferensføler**


**QBM4000-..**  
**QBM4100-..**

 <p>1919Z04</p>	<p>QBM4000-..</p> 	<p>QBM4100-1D..</p> 
 <p>1919M02</p>	 <p>1916Z02</p>	
 <p>1919Z02</p>	 <p>1919Z03</p>	

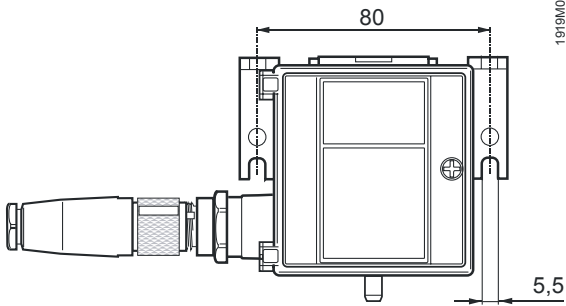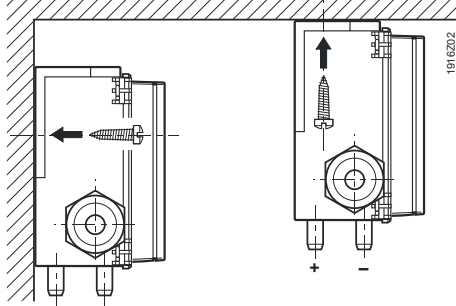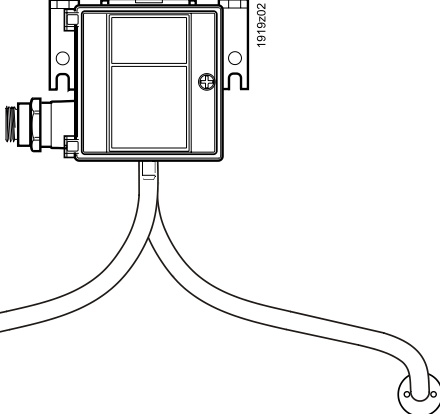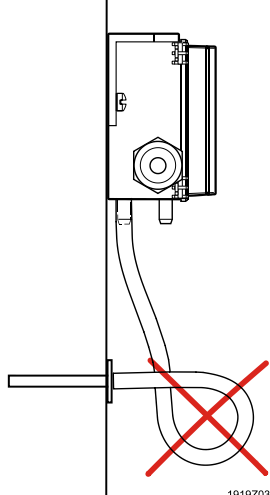
**QBM4000-..**  
Output 0...10 V

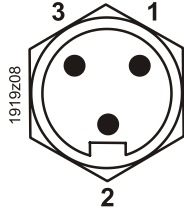



Pin	
3	(GL)
1	(U1)
2	(M)

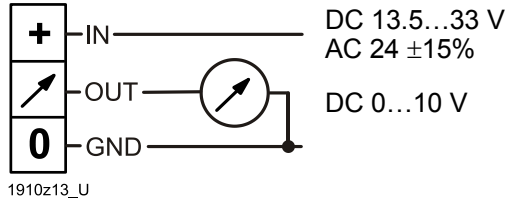

**QBM4100-..**  
Output 4...20 mA

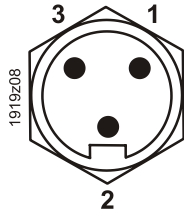

Pin	
3	(G)
1	(I)
2	(-)

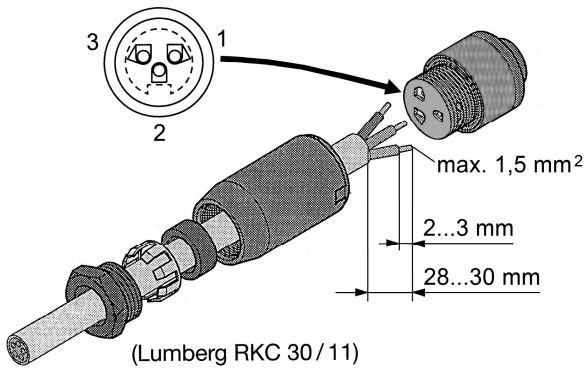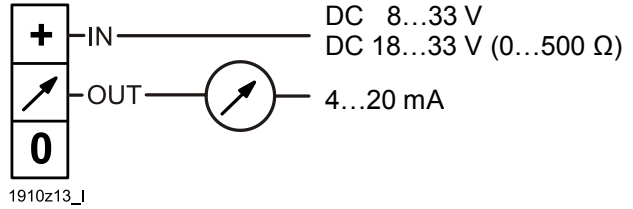

For additional information please refer to the [Sensor Installation Handbook](#)

and <http://siemens.com/bt/download>



→ search for "QBM4000" or "QBM4100"